

Width Measurement

cmc


cms

Drop Measurement

CURTAIN MEASURING GUIDE





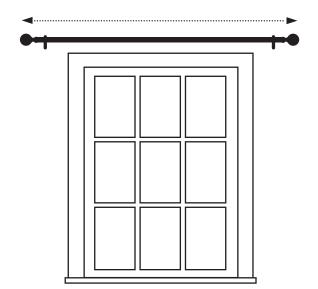

Measuring Width:

The pole should be fitted 15cm above your window top, with 15cm - 20cm excess either side of the window recess.

Measure the total width of the pole, excluding finials. Account for overlap. This is an additional measurement, normally 2.5cm, which allows the hanging curtains to overlap in the middle when they are closed.

Measuring Drop:

Take the measurement from the bottom of the pole rings to your desired drop length.







Sill Length 1cm above the sill Below sill length 15cm below the sill Full length 1.5cm from the floor