

Width Measurement


Drop Measurement

 cms

 cms

## CURTAIN MEASURING GUIDE

# Puffball (Pole)

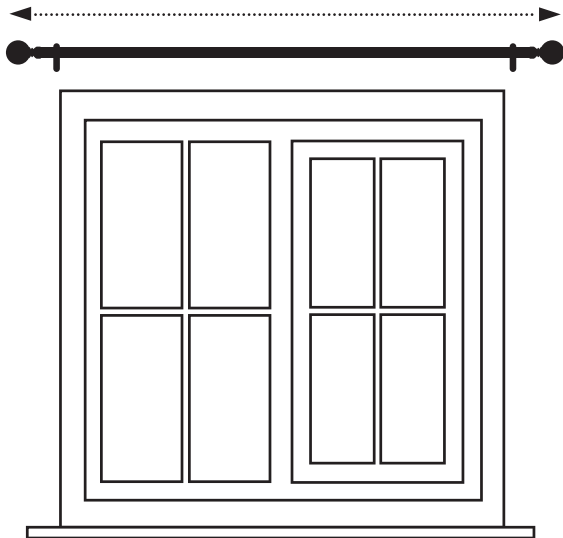

### Measuring Width:

The pole should be fitted 15cm above your window top, with 15cm - 20cm excess either side of the window recess.

Measure the total width of the pole, excluding finials. Account for overlap. This is an additional measurement, normally 2.5cm, which allows the hanging curtains to overlap in the middle when they are closed.

### Measuring Drop:

Take the measurement from the top of the pole to your desired drop length.

Add an additional 33cm - 45cm to this length to allow for the fabric visible above the pole.



Sill Length  
1cm above the sill

Below sill length  
15cm below the sill

Full length  
1.5cm from the floor